

Installing and uninstalling blaZt USB drivers WIN CE



Last revised - Oct-05

These instructions have been copied from the FTDI website located at <http://www.ftdichip.com> where you can also find a troubleshooting guide if your cable has installed incorrectly.

1. Download the latest available D2XX drivers for the required processor model from the [FTDI website](#) and unzip them. A copy of these can be found on the blaZt CD accompanying your cable. If your processor model is not listed, please e-mail [FTDI support](#) with your target processor model. The critical files in the driver package are:

- ftdi_ser.dll - the VCP driver file
- FTDIPORT.inf - user changeable file to allow devices with custom VID and PID combinations to be installed

2. Copy all of the unzipped files to the \\Windows directory on the PDA.

3. If the PDA requires a host adaptor (e.g. USB host cable, presentation pack or Compact Flash host card), make sure that it is connected and installed **before** proceeding.

4. Connect the blaZt cable to a host USB port on the PDA. This will provide a dialog box to direct Windows CE to the driver files.

5. Type the full name of the VCP driver file into the dialog box as shown below. If the file name is incorrect, the driver will not be found and the device will not function.



6. The device installation is now complete. The installation may be verified using the [VCPTTest](#) test program available from the [Utilities](#) page of the [FTDI website](#).